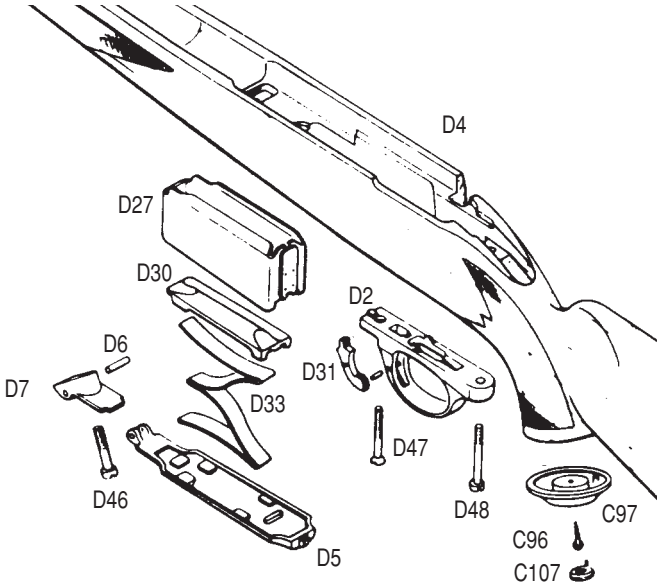

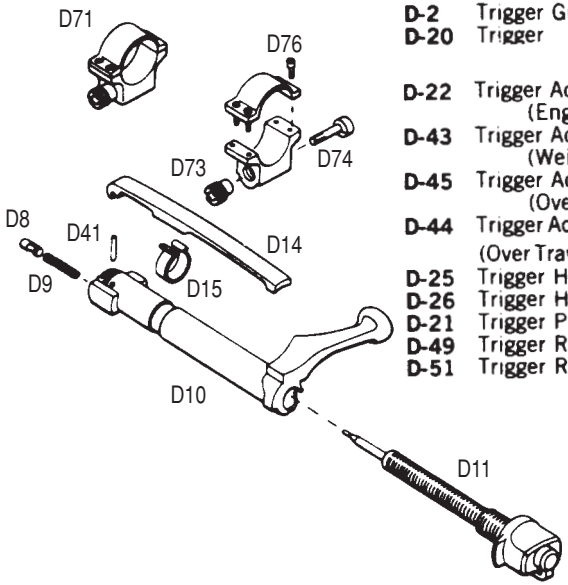
**D-107** Stock Cross Bolt Nut (Not Illus.)
**D-104** Stock Reinforcement Assy. (Not Illus.)
**D-75** Stock Reinforcement Screw (Not Illus.)
**D-2** Trigger Guard
**D-20** Trigger
**D-22** Trigger Adjustment Screw (Engagement)
**D-43** Trigger Adjustment Screw (Weight of Pull)
**D-45** Trigger Adjustment Screw (Over Travel)
**D-44** Trigger Adjustment Set Screw (Over Travel)
**D-25** Trigger Housing
**D-26** Trigger Housing Cross Pin
**D-21** Trigger Pivot Pin
**D-49** Trigger Return Spring
**D-51** Trigger Return Spring Seat